

## SPECTRA DESCALER

### DESCALING POWDER WITH A PERFORMANCE INDICATOR SYSTEM

#### UNIQUE INDICATOR SYSTEM

Spectra Descaler delivers a visual indication of descaling performance allowing users to determine if the system has been effectively descaled. Colour indicators highlight the difference between an effective and ineffective descaling solution. A specific blend of pH-sensitive dye compounds will show a range of colours from red, through to orange, brown and blue. Orange indicating an effective descaling cycle, and blue indicating that another descaling cycle should be undertaken.



#### CERTIFIED FOR ORGANIC USE

Spectra is certified by the Organic Materials Review Institute (OMRI) and is free from phosphate and Genetically Modified Organisms.


#### READILY BIODEGRADABLE

Detergents in Spectra are readily biodegradable.

#### CAN BE USED ON A WIDE RANGE OF EQUIPMENT

Designed for espresso machine water tanks, boilers and coffee brewers.

#### HOW TO USE

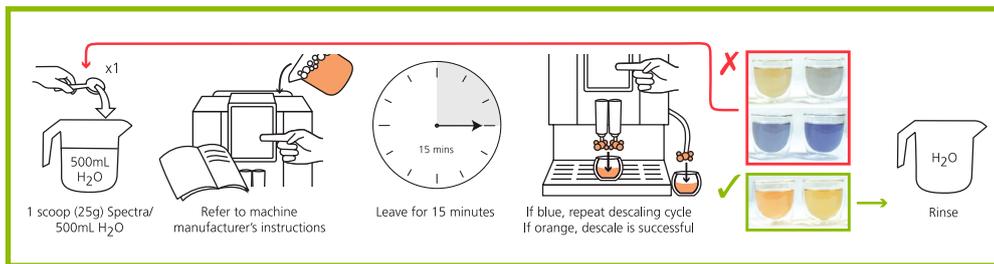

1. Add 1 scoop (25g) to 500mL of water and dissolve to form an orange solution. Pour into water tank (If machine has a water filter, remove this prior to turning machine on).
2. Run 500mL of solution through the machine. Ensure steam wand is purged by turning the steam on for at least 20 seconds.
3. Leave the descaler in the machine for 15 mins before running the remaining descaling solution (500 mL) through the machine.
4. The descaling solution exiting the machine should be orange, indicating the descaling cycle has been effective. If the solution is blue, run another descaling cycle by repeating steps 1-4.
5. Rinse thoroughly by flushing one tank of clean fresh water through the system, as well as through the steam wand.

PRODUCT	TYPE OF UNIT PACK	NET UNIT WEIGHT	# OF SACHETS PER UNIT	# OF UNITS PER CASE	# OF SACHETS PER CASE	PRODUCT CODE / INDIVIDUAL	PRODUCT CODE / CASE
Spectra Descaler	Sachet	25g	4	12	48	E12172	E17173
	Jar	600g	N/A	12	N/A	E14135	E18091